



**EVALUATION OF BIOCIDAL ACTIVITY  
OF « DUST FREE ACTIVE » PROCESS  
ACCORDING TO A METHOD BASED ON EN 17272  
(20°C ± 2°C – CLEAN CONDITIONS)**

**Report written by: Suzy BULOT**

**Marseille: 3/4/2021**

This test report concerns only the tested product

**This test report should not be reproduced, or entirely, without the written authorization of Eurofins Biotech Germande**

---

**Eurofins Biotech-Germande**

RCS Marseille 423 865 419 TVA FR86 423 865 419 - APE 7120B

Head office : 163 avenue de Luminy, Parc scientifique de Luminy Case 927, 13288 Marseille Cedex 9 - T : +33 (0) 4 91 82 82 40

## INDEX OF REVISIONS

Each revision of the test report cancels/supersedes the previous one.

In order to limit the risks of errors and misuse of outdated document any cancelled reports and copies must be destroyed.

| Amendment history        |                      |                          |
|--------------------------|----------------------|--------------------------|
| Report N°                | Amended paragraph(s) | Purpose of the amendment |
| 3194.KIL.21.2.17272 – V1 | -                    | Creating the report      |

This test report concerns only the tested product

This test report should not be reproduced, or entirely, without the written authorization of Eurofins Biotech Germande

**Eurofins Biotech-Germande**

RCS Marseille 423 865 419 TVA FR86 423 865 419 - APE 7120B

Head office : 163 avenue de Luminy, Parc scientifique de Luminy Case 927, 13288 Marseille Cedex 9 - T : +33 (0) 4 91 82 82 40

## CONTENT

|                                           |   |
|-------------------------------------------|---|
| I. DESCRIPTION OF THE STUDY:              | 4 |
| II. OBJECTIVE OF THE STUDY:               | 4 |
| III. TESTED PROCESS:                      | 4 |
| IV. METHOD:                               | 5 |
| V. RESULTS:                               | 7 |
| VI. CONCLUSIONS:                          | 7 |
| VII. REFERENCES:                          | 8 |
| VIII. STATEMENT GOOD LABORATORY PRACTICE: | 8 |

This test report concerns only the tested product

This test report should not be reproduced, or entirely, without the written authorization of Eurofins Biotech Germande

**Eurofins Biotech-Germande**

RCS Marseille 423 865 419 TVA FR86 423 865 419 - APE 7120B

Head office : 163 avenue de Luminy, Parc scientifique de Luminy Case 927, 13288 Marseille Cedex 9 - T : +33 (0) 4 91 82 82 40

## I. DESCRIPTION OF THE STUDY:

|                            |                                                                                                                                            |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Title:</b>              | Evaluation of biocidal activity of « Dust Free Active » process according to a method based on EN 17272<br>(20°C ± 2°C – Clean conditions) |
| <b>Internal reference:</b> | Study N° : 3194.KIL.20                                                                                                                     |
| <b>Sponsor:</b>            | KLIMA RODACLIM<br>255 Avenue De La Roche Fourcade<br>ZI St Mitre 13400 AUBAGNE<br><br>Contact : Jean-Baptiste SALGI                        |
| <b>Test period:</b>        | From : 02/24/2020 to 02/27/2020                                                                                                            |
| <b>Study manager:</b>      | Suzy BULOT                                                                                                                                 |
| <b>Test done by:</b>       | Andréa COL                                                                                                                                 |
| <b>Test laboratory :</b>   | Laboratoire EUROFINS BIOTECH – GERMANDE<br>Parc Scientifique de Luminy<br>163 avenue de Luminy – Case 927<br>13288 Marseille Cedex 9       |

## II. OBJECTIVE OF THE STUDY:

Evaluate, according to the test conditions described in EN 17272, the capacity of « Dust Free Active » process to reduce, in presence of specific interfering substances (clean conditions), in 2, 6 hours and 24 hours, of at least 10<sup>5</sup> the number of viable cells of *Staphylococcus aureus* dried on stainless steel disk.

## III. TESTED PROCESS:

Name:..... Dust Free Active (cf. figure n°1)  
Serial number\*:..... 13070-AC  
Manufacturer:..... KLIMA RODACLIM  
Disinfectant used \*:..... N.A.

\*Data provided by the customer, do not engage the laboratory responsibility.



**Figure n°1:** Dust Free Active ►

This test report concerns only the tested product

**This test report should not be reproduced, or entirely, without the written authorization of Eurofins Biotech Germande**

**Eurofins Biotech-Germande**

RCS Marseille 423 865 419 TVA FR86 423 865 419 - APE 7120B

Head office : 163 avenue de Luminy, Parc scientifique de Luminy Case 927, 13288 Marseille Cedex 9 - T : +33 (0) 4 91 82 82 40

## IV. METHOD:

### a) Tested strain:

*Staphylococcus aureus* CIP 4.83

The conditions of preservation and control of the microbial strains used for the determination of the bactericidal activity are those described in the European standard NF EN 12353 (internal protocol: T-DM-S-WO37879).

### b) Interfering substances:

|                                     |              |
|-------------------------------------|--------------|
| Bovine albumine:.....               | 0,03g        |
| Tryptone-salt:.....                 | q.S.p. 100ml |
| Bovine albumine concentration:..... | 0,3g/l       |
| Internal reference:.....            | 10060056     |

Sterilized by membrane filtration.

### c) Neutralizing solution:

Composition of the neutralizing solution:

|                           |              |
|---------------------------|--------------|
| Tween 80:.....            | 10% (v /v)   |
| Lecithin:.....            | 2%           |
| Sodium thiosulfate:.....  | 2%           |
| L-Histidin:.....          | 2%           |
| Saponin:.....             | 1%           |
| Tryptone soya broth:..... | q.s.p. 100ml |

Steam sterilized (121°C, 21 minutes).

Internal reference: E342.2.4/E339.1.3

### d) Growth and counting conditions:

Trypticase soya agar.

Steam sterilized (121°C, 21 minutes).

Internal reference: E341.2.3/E341.1.1

### e) Carriers:

Stainless steel disk according to the paragraph 5.2.3.2 of the standard.

This test report concerns only the tested product

This test report should not be reproduced, or entirely, without the written authorization of Eurofins Biotech Germande


Eurofins Biotech-Germande

RCS Marseille 423 865 419 TVA FR86 423 865 419 - APE 7120B

Head office : 163 avenue de Luminy, Parc scientifique de Luminy Case 927, 13288 Marseille Cedex 9 - T : +33 (0) 4 91 82 82 40

f) Conditions of use of the device:

The method used for the test is described in the standard EN 17272 (Fig. 1).

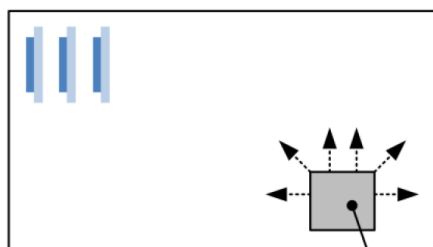

Source of gas or dispersed product

**Figure 1. Arrangement of the equipment during the test.** The carriers are placed opposite side to the disinfectant process according to the specification of the standard.

|                              |                                                                                                     |
|------------------------------|-----------------------------------------------------------------------------------------------------|
| Areas:.....                  | 80m <sup>3</sup>                                                                                    |
| Tested temperature:.....     | 20°C ± 2°C                                                                                          |
| Incubation temperature:..... | 37°C ± 1°C                                                                                          |
| Aspect of the product:.....  | Incolore/inodore                                                                                    |
| Relative humidity:.....      | Between 56.8% and 41.7%, the humidity has reduced below 50% 5 hours after the system was turned on. |

This test report concerns only the tested product

This test report should not be reproduced, or entirely, without the written authorization of Eurofins Biotech Germande

Eurofins Biotech-Germande

RCS Marseille 423 865 419 TVA FR86 423 865 419 - APE 7120B

Head office : 163 avenue de Luminy, Parc scientifique de Luminy Case 927, 13288 Marseille Cedex 9 - T : +33 (0) 4 91 82 82 40

## V. RESULTS:

| Contact time | Microbial test suspension (N)<br>(Nb. CFU/ml) | Preliminary tests              |                                |                                | Positive control (T)<br>(Nb. CFU/carrier) | Test                                                                          |                                                    |            |
|--------------|-----------------------------------------------|--------------------------------|--------------------------------|--------------------------------|-------------------------------------------|-------------------------------------------------------------------------------|----------------------------------------------------|------------|
|              |                                               | n <sub>1</sub> /N <sub>1</sub> | n <sub>2</sub> /N <sub>2</sub> | n <sub>3</sub> /N <sub>1</sub> |                                           | n'1+n'2                                                                       | Log <sub>10</sub> reduction - mean                 | Red %      |
| 2 hours      | 5,4.10 <sup>8</sup>                           | 65/57<br>71/51                 | >330/>330                      | 37/57<br>37/51                 | T <sub>2h</sub> =1,7.10 <sup>7</sup>      | d1: 1,5.10 <sup>5</sup><br>d2: 1,6.10 <sup>6</sup><br>d3: 1,6.10 <sup>6</sup> | R1: 2,1<br>R2: 1,0<br>R3: 1,0<br><b>Rmean =1,4</b> | <b>93%</b> |
| 6 hours      |                                               |                                |                                |                                | T <sub>6h</sub> =3,1.10 <sup>6</sup>      | d1: 4,8.10 <sup>5</sup><br>d2: 3,7.10 <sup>6</sup><br>d3: 2,5.10 <sup>6</sup> | R1: 1,3<br>R2: 1,3<br>R3: 2,2<br><b>Rmean =1,6</b> | <b>96%</b> |
| 24 hours     |                                               |                                |                                |                                | T <sub>24h</sub> =1,3.10 <sup>6</sup>     | d1: 1,8.10 <sup>5</sup><br>d2: 1,3.10 <sup>5</sup><br>d3: 1,1.10 <sup>5</sup> | R1: 1,5<br>R2: 1,5<br>R3: 1,3<br><b>Rmean =1,5</b> | <b>96%</b> |

**Table 1:** Results. Evaluation of biocide activity of « Dust Free FC Unit » process according to EN 17272 against *Staphylococcus aureus* CIP 4.83. T: number of microorganisms on control disks. N1: counting of test suspension for dilution/inclusion – N2: counting of test suspension by filtration. n1: search of inhibitor effect in the agar medium. – n2: Search of inhibitor effect in membrane. n'1: number of surviving test organism in 100 ml of recovery liquid – n'2: number of colonies obtained directly by inclusion of the carrier. n'1+n'2: number of microorganisms on the test carrier. d1: disk n°1/d2: disk n°2/d3: disk n°3.

### Hydrogen peroxide concentration measuring:

Device used: Dräger Polytron 7000

Detected concentration (device off): 0 ppm

Detected concentration (during testing): 0 ppm

### Ozone concentration measuring:

Device used: AOM3000 O3 OZONE GAS MONITOR\*

Detected concentration (device off): between 3 and 6 ppb

Detected concentration (during testing): between 4 and 6 ppb

\*Customer-supplied device, do not engage the laboratory responsibility.

## VI. CONCLUSIONS:

In the test conditions described, the process DUST FREE Active induces a reduction of the number of viable cells of *Staphylococcus aureus* CIP 4.83 spread on stainless steel carrier of 1,3 to 2,2 log<sub>10</sub> (i.e. 95% to 99% of the initial load) after a contact time of 6 hours at 20°C.

This test report concerns only the tested product

This test report should not be reproduced, or entirely, without the written authorization of Eurofins Biotech Germande

Eurofins Biotech-Germande

RCS Marseille 423 865 419 TVA FR86 423 865 419 - APE 7120B

Head office : 163 avenue de Luminy, Parc scientifique de Luminy Case 927, 13288 Marseille Cedex 9 - T : +33 (0) 4 91 82 82 40

## VII. REFERENCES:

- 1-NF EN 17272 : April 2020. Chemical disinfectants and antiseptics – Method of airborne room disinfection by automated process – Determination of bactericidal, mycobactericidal, sporicidal, fungicidal, yeasticidal, virucidal and phagocidal activities.
- 2- Guide to good practice for disinfection of medical devices. Conseil Supérieur d'Hygiène Publique de France. <https://www.vie-publique.fr/rapport/24373-guide-de-bonnes-pratiques-de-desinfection-des-dispositifs-medicaux>

## VIII. STATEMENT GOOD LABORATORY PRACTICE:

The study was conducted according to NF EN ISO/IEC 17025 (2017) General requirements for the competence of testing and calibration laboratories. Applicable Standard Operating Procedures and Good Laboratory Practice were followed in this study.

The original records of this report, the notebooks, protocol, and final study report are stored in the archives of Eurofins Biotech-Germande 3194.KIL.21.

Suzy BULOT

Le 3/4/2021



This test report concerns only the tested product

This test report should not be reproduced, or entirely, without the written authorization of Eurofins Biotech Germande

Eurofins Biotech-Germande

RCS Marseille 423 865 419 TVA FR86 423 865 419 - APE 7120B

Head office : 163 avenue de Luminy, Parc scientifique de Luminy Case 927, 13288 Marseille Cedex 9 - T : +33 (0) 4 91 82 82 40